


# Moulding Fasteners

Illustrations Are Actual Size

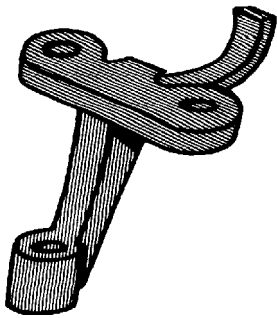


1580J.....\$2.50Ea  
Headlamp Adjusting Nut  
w/screw & mounting bolts




2347.....60Ea  
Headlamp Beam Adjust-  
ing Screw Nut Chevy  
41-48, All GM 40-50All  
Chrysler, Ford, Lincoln,  
Merc, Hudson, Nash,  
Packard Studebaker 41-  
52, Kaiser-Frazer 46-52,  
Willys 40-42




5313.....\$1.00Ea  
Headlamp Door To Body  
Fastener Ford 1962

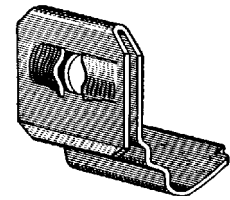


2617.....85Ea  
Headlamp Door  
Retaining Speed Nut Ford  
1955

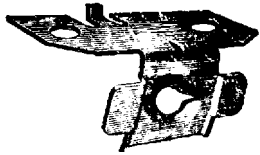


3977.....\$1.00Ea  
Headlamp Bezel Lower  
Retaining Fastener Chevy  
1961

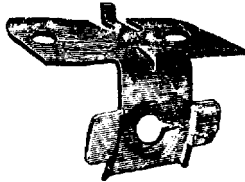

3978.....\$1.00Ea  
Headlamp Body Lower  
Retaining Fastener Chevy  
1961

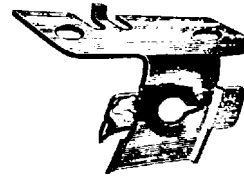


3979.....\$1.00Ea  
Headlamp Body Retain-  
ing Fastener Chevy  
1961

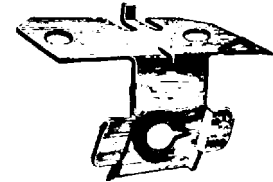

3980.....\$1.00Ea  
Headlamp Body  
Retaining Chevy 1961




3983.....\$1.00Ea  
Headlamp Fastener

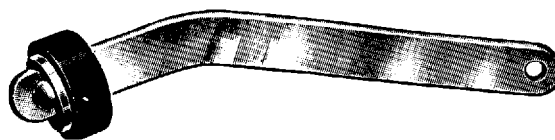

4211.....\$4.25Ea  
Door Check Arm  
Assembly Ford  
38-48 Trucks




4210.....\$4.25Ea  
Door Check Arm  
Assembly Ford 38-40,  
38-41 Sedan Delivery

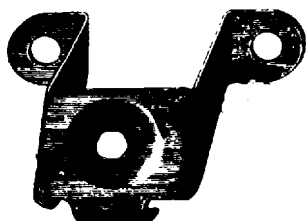


3981.....\$1.00Ea  
Chevy Headlamp Bezel  
Lower 1961



3982.....\$1.00Ea  
Chevy Headlamp Door  
1960

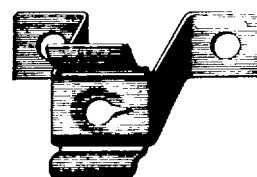

5341.....\$1.00Ea  
Headlamp Bezel Or Door  
Upper Outboard Retain-  
ing Fastener Chevy 1962

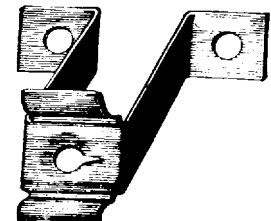

5342.....\$1.00Ea  
Headlamp Bezel Or Door  
Upper Inboard Retain-  
ing Fastener Chevy 1962