


Moulding Fasteners

Illustrations Are Actual Size

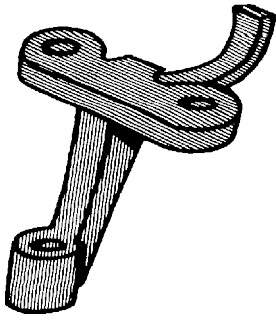


1580J.....\$2.50Ea
Headlamp Adjusting Nut
w/screw & mounting bolts




2347.....60Ea
Headlamp Beam Adjusting
Screw Nut Chevy
41-48, All GM 40-50All
Chrysler, Ford, Lincoln,
Merc, Hudson, Nash,
Packard Studebaker 41-
52, Kaiser-Frazer 46-52,
Willys 40-42




5313.....\$1.00Ea
Headlamp Door To Body
Fastener Ford 1962

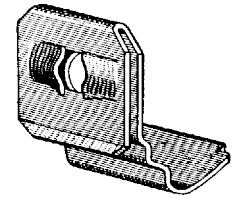


2617.....85Ea
Headlamp Door
Retaining Speed Nut Ford
1955

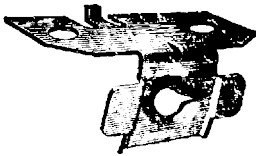


3977.....\$1.00Ea
Headlamp Bezel Lower
Retaining Fastener Chevy
1961

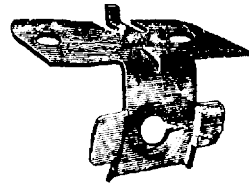

3978.....\$1.00Ea
Headlamp Body Lower
Retaining Fastener Chevy
1961

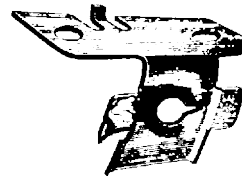

3979.....\$1.00Ea
Headlamp Body Retain-
ing Fastener Chevy
1961

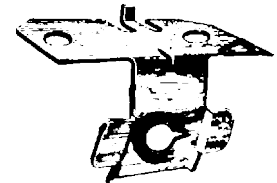

3980.....\$1.00Ea
Headlamp Body
Retaining Chevy 1961




3983.....\$1.00Ea
Headlamp Fastener



4211.....\$4.25Ea
Door Check Arm
Assembly Ford
38-48 Trucks




4210.....\$4.25Ea
Door Check Arm
Assembly Ford 38-40,
38-41 Sedan Delivery

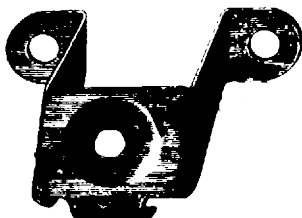


3981.....\$1.00Ea
Chevy Headlamp Bezel
Lower 1961



3982.....\$1.00Ea
Chevy Headlamp Door
1960

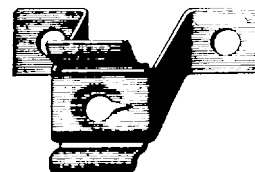

5341.....\$1.00Ea
Headlamp Bezel Or Door
Upper Outboard Retain-
ing Fastener Chevy 1962

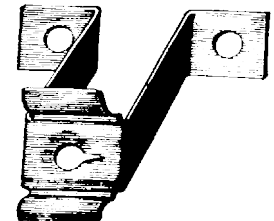

5342.....\$1.00Ea
Headlamp Bezel Or Door
Upper Inboard Retaining
Fastener Chevy 1962