

# Speed Nuts


Illustrations Are Actual Size



**B1327.....60Ea**  
Plymouth 49




**2428.....60Ea**  
All Dodge 50-52

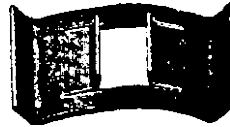


**2221.....60Ea**  
Chrysler 41



**B1076.....\$1.25Ea**  
Chrysler Cars 46-48

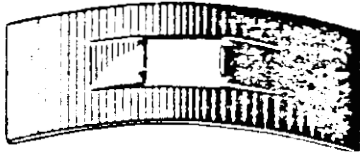

**B1150.....\$1.00Ea**  
Chevy 46-48

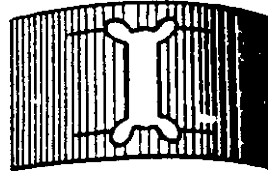

**B1479.....85Ea**  
Pontiac 53



**B1212.....60Ea**  
Olds 51-52




**B1396.....45Ea**  
GM Cars 51-52



**B1208.....60Ea**  
Ford & Meteor 48-49




**B1132.....\$1.25Ea**  
Ford, Meteor, Mercury &  
Monarch 49-54;  
Lincoln 53-55



**B1340.....\$1.00Ea**  
Chevy 49




**B1527.....60Ea**  
Chevy Belair 52

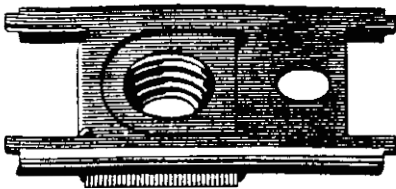

**TN96R.....\$2.00Ea**  
Buick 57  
7/16-14



**B1195.....45Ea**  
Ford & Meteor 49

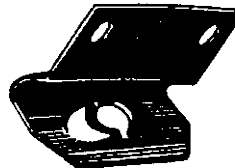


**B1146.....\$1.00Ea**  
Mercury & Monarch 48



**B1478.....\$2.00Ea**  
All Ford Cars 53-57-Vent  
Window



**TN36.....60Ea**  
57 Pontiac Emblem



**TN107.....\$1.00Ea**



**TN30.....\$1.00Ea**



**TN39R.....\$2.00Ea**  
5/16-18



**TN74.....\$1.00Ea**  
Ford Cars 57



**B1149.....\$1.00Ea**  
Chevy 47-48



**TN136.....\$1.25Ea**  
Ford Cars 59